



PRESSURE RELIEF VALVE SPRING LOADED

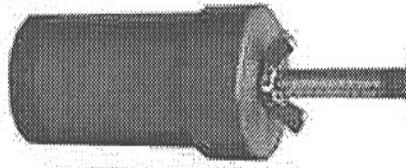

The primary purpose of the pressure relief valve in the air piping system is to act as a safety valve to protect the blower from over pressurization. The valve is pre-set to a system pressure. When that pre-set pressure is reached, the valve will open, and vent off any excess pressure.

This relief valve is available in four (4) sizes from 1" to 4" diameter pipe size and is pre-set at the factory for a system pressure of 5 PSI. The pressure can easily be adjusted with a screwdriver and wrench to vary the pressure range from 0-10 PSI.

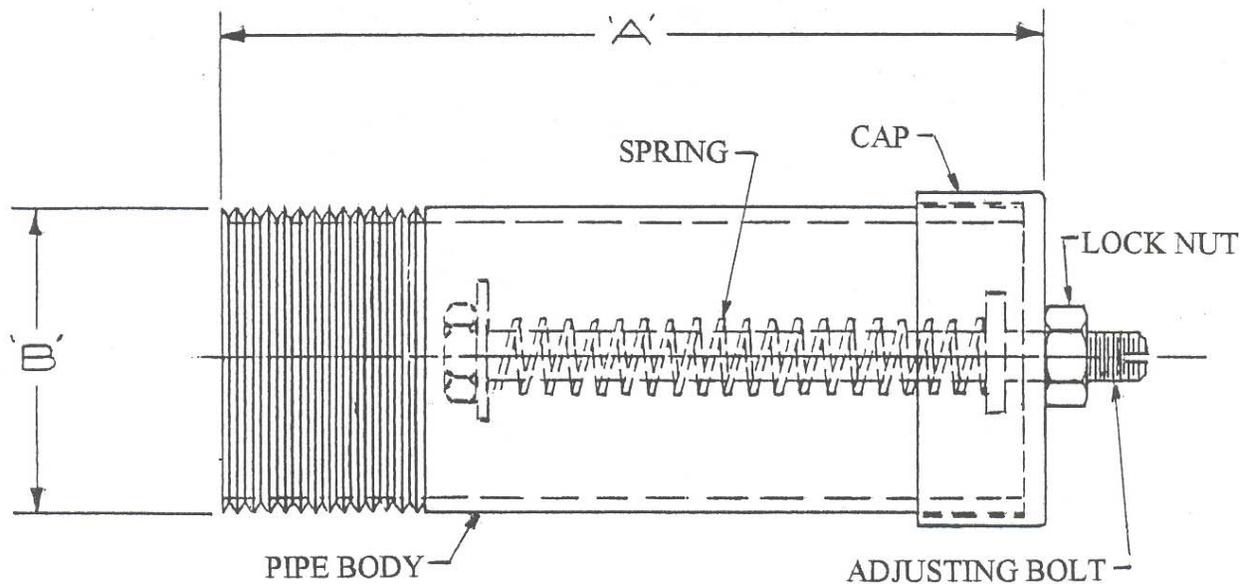

MODEL AND SPECIFICATIONS

MODEL	PRV-1	PRV-2	PRV-3	PRV-4
"B" NPT SIZE	1"	2"	3"	4"
"A" LENGTH	4"	5.25"	5.25"	5.25"
MAX CFM	85	250	300	600



**Pollution
Control
Systems, Inc**

5827 Happy Hollow Rd. Suite 1-B
Milford, OH 45150-1830
Tel: (513) 831-1165 Fax: (513) 965-4812
E-mail: Polconsys@aol.com
www.PollutionControlSystem.com